

Cuckoo Clock Instructions:

Before hanging up the clock please carefully read these operating instructions. It is very important to follow these procedures.

*Unpack with care. When removing the clock from the box, please hold it at the roof only be cautious of the carvings, as these are fragile. Be sure to take out the loose accessories, such as pendulum, weights, etc. **DO NOT** remove the wire or elastic fixed to the bottom, and do not unwrap the chains yet.*



Hang the clock on a strong nail or screw, which is fixed to a stud in the wall at a height of at least 2 meters from the floor. Once the clock is hung very carefully cut the elastic that holds the chains in place and remove the chains from their packaging. Now the clock must not be put down or turned over otherwise the chains will slip off the chain wheels causing the clock not to work. In case a chain slips from the wheel please return to Swiss Time immediately.

Hang the pendulum in the wire loop found under the clock in the middle. Hook the weights on the chain hooks. Unlock the bird's door. The clock must be level or the pendulum will not swing freely or evenly.

*To set the correct time, turn the minute hand (the longer of the two) to the left while holding close to where the hands connect to the clock. **DO NOT** move the hour hand. If you turn the minute hand to the right you must wait for the cuckoo bird to complete its chirps at every hour and every half hour and if music is involved you must await the end of the music as well. Gently push the pendulum to one side to start the clock.*

Depending on the model, the clock must be wound either every 24 hours or every 8 days by pulling the ring end of the chain downwards thereby raising the

weights towards the clock. Make sure to pull the chain all the way down, and never hold the weights or help lift them.

You may regulate the time by sliding the pendulum either up or down. If the clock seems to gain time push the pendulum disc downwards on the pendulum bar, and vice-versa if the clock is losing time. If the clock needs to be moved, please use caution. Always make sure that the weights have been wound to the top and the pendulum has been removed before un-hooking your clock from the wall.