



Swiss Time

"WHERE WATCHMAKERS WORK"

86 Exchange Street
Portland, Maine 04101
(207) 773-0997
www.myswisstime.com
info@myswisstime.com

Is Your T-Touch Synchronized?

If the time indicated by the hands of your watch no longer matches the digital time indicated by the LCD your watch is no longer synchronized. Additionally, the hands will no longer line up correctly with the selected functions. The one exception to this is the *Meteo* function*. Another indication that your watch is no longer synchronized is that the alignment of the compass is off. All of the above will occur if the watch is not synchronized.



What Causes the T-Touch to De-Synchronize?

The most common cause of de-synchronization is exposure to a magnetic field. The speakers and vibrations, common in everyday electronics such as cellphones, alarm clocks, and stereo systems can create a strong enough magnetic field to disrupt synchronization if brought too close to your T-Touch. X-ray machines, retail theft detection systems, and small motors can also cause de-synchronization.



If the watch is subjected to a strong physical shock this can disrupt the battery in its seating causing a glitch in the electrical flow to the movement in turn de-synchronizing your watch. Furthermore, a low battery may also cause de-synchronization.

Steps to Synchronize the Hands

- Press the center pusher. The watch should beep once.
- Touch the center of the touch-sensitive face until *24H Cm* (or *12H Fft* or *24H Fft* or *12H Cm*) is shown in the digital LCD display.
- Press and hold the center pusher for approximately 5 seconds. The watch will beep once and then after 5 seconds have passed the watch will beep a 2nd time. After the second beep, the digital LCD display should read SYNCHRO. If not, return to step one.
- Press the upper pusher (+) to advance the minute hand until it is positioned exactly at 12:00.
- Press the lower pusher (-) to advance the hour hand until it is also positioned exactly at 12:00.
- When both hands are aligned together and pointing directly at 12:00, press the center pusher to save the setting. The hands of the watch are now synchronized. Now double check that your watch is set and the other functions of your watch are correct.



* The *Meteo* function indicates trends in the weather by orienting the hands anywhere between 6 minutes to 12:00 to 6 minutes after 12:00. If the hands are approaching 12:00 when this function is selected, it indicates a downward trend in weather patterns. On the other hand, if the hands are past 12:00, it indicates an upward trend in the weather pattern. If the hands point directly at 12:00 when this function is selected, it indicates that the weather is holding steady. Following a battery replacement, it may take up to 8 hours for the sensor in the watch to gather enough data to provide weather trending information accurately.